



MANNATECH

TRANSFORM YOUR LIFE.



DAILY CLEANSING &
EXFOLIATION BRUSH

INSTRUCTION BOOKLET

WELCOME

Thank you for selecting the Mannatech Cleansing & Exfoliation Brush, your daily skincare tool for more effective cleansing. You are now on your way to healthier looking skin and a softer, smoother complexion.

With normal cleansing rituals, impurities can build up causing skin irritations and breakouts, as well as making skin look dull and lack-luster. The Mannatech Brush with its gentle cleansing action has ultra-fast but soft pulses that sweep across your skin. This constant action gently exfoliates the skin surface, leaving it feeling fresh and invigorated.

We think you'll love using your Mannatech Brush and we encourage you to read the following instructions carefully to get the safest and most effective use out of your new cleansing routine. For help and any additional product information, please don't hesitate to get in touch with the Mannatech team.

Call us at 1-800-281-4469 or visit us at Mannatech.com for more great products.

BEFORE USE, PLEASE READ CAREFULLY

These instructions are designed to enhance the use of your new Mannatech Daily Cleansing & Exfoliation Brush and protect you and others from injury. If you have questions regarding safe usage, please contact our customer service team at 1-800-281-4469.

FOR SAFETY:

- Do not use on scarred, broken, inflamed, damaged or diseased skin. Do not use with the condition of eczema or any other ailment affecting the skin. If in doubt, please consult your doctor.
- Avoid direct brush contact with the eye area.
- Not suitable for use on children under the age of 14.
- Strictly for external use only.
- Keep out of reach of children.
- This product is not intended for use by any persons with reduced physical, sensory or mental capabilities, unless under the supervision, guidance and instruction of a person responsible for their safety.

FOR SAFETY:

- NEVER charge this product near water.
- NEVER reach for the charging cable if it falls into water.
- ALWAYS turn off the power at the main source before retrieving the unit or it may result in electric shock or death.
- Do not submerge the brush in water. Although it is fully waterproof, it should not be fully submerged for any period of time.
- Do not attempt to disassemble or repair any part of the product. This must be carried out by a qualified technician.
- This product must only be used for its intended purpose as described in this user guide. Misuse of the product may cause harm. Mannatech cannot be held responsible for incorrect usage of the product.
- Do not use near shortwave or microwave equipment. If you experience poor brush function, then it is possible that external electromagnetic interference is responsible, i.e. electric motors, speakers or mobile phones. Remove the product from the source of interference and re-start it to restore normal operation.
- Other electrical equipment in the area may be affected by the usage of this product.

IMPORTANT

You may experience some initial changes to your skin condition after the first few days of using the Mannatech Brush. This is completely normal as your skin adjusts to the new cleansing method. Switch to the SENSITIVE setting until any out-breaks clear and moisturize regularly after use.

- If sore or hyper-sensitive patches occur, stop using the Brush for a couple of days or until the patches clear.
- If uncertain of your skin condition, it is recommended you use the Brush in SENSITIVE mode.
- Also select the SENSITIVE mode when using on drier skin areas for the first 5 days to allow your skin to adjust to the new cleansing method.
- Each cleansing with the Mannatech Brush should last no longer than 1 minute for the first 5 days.

PARTS AND ACCESSORIES

- A. Magnetic Wireless Travel Charger
- B. Active Clean Brush Head
- C. Mannatech Handle
- D. Mode Indicator Light
- E. Control Panel



CONTROL PANEL

POWER INDICATOR LIGHT

- Light is solid white when the Brush is on.
- Light will flash white when the battery is low.

ON | OFF | MODE SELECTOR BUTTON

- Press once to turn on to Daily Cleanse mode.
- Press again for Sensitive Mode.
- Press again to turn off.

MODE INDICATOR LIGHT

- Light On = Daily Cleanse
- Light Off = Sensitive

CHARGE INDICATOR LIGHT

- Light is red when fully charged.
- Red light will flash while charging.

CHARGING YOUR BRUSH


CHARGING INSTRUCTIONS

- When the Brush is low on battery, a white low charge light will flash and the Brush will beep.
- To charge the Brush, place the magnetic clip onto the base of the Brush as shown.
- Always turn the Brush power off before charging.
- It is important to charge the Brush at least once every 3 months to maintain the battery's ability to charge. This is common for chargeable batteries.



- The red charging light will flash when charging.
- Light will turn solid when fully charged.
- Full Charge Time: 12-15 hours

THE BRUSH HEAD

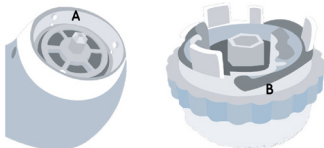

INSERTING THE BRUSH HEAD

1. Carefully line up the round points on the inside of the handle (A) with the bottom of the track (B) on the brush head.
2. Push the brush head down into place.
3. Turn the brush head clockwise for 1/3 turn until you feel the brush head pull downwards and is held firmly in place.
4. You should no longer be able to remove the brush head by pulling.
5. Turn the brush on and you should see the bristles moving very fast back and forth.

TO REMOVE THE BRUSH

1. Grip the brush head tightly.
2. Turn the brush head counter-clockwise for 1/3 turn until the brush becomes loose.
3. Pull and remove.

TIP: You may find it easier to insert and remove the brush head with the protective cap on the brush to help grip it.

THE CLEANSING PROCESS

- Rinse your skin with warm water in the areas you wish to cleanse. (The Mannatech Brush is waterproof, so you may also use it in the shower).
- Wet the brush head with warm water.
- Apply your cleanser or soap to the brush (or directly to the area you wish to use it on).
- You may add more cleanser at any time during cleansing in order to create a lather.

Follow for a 1 minute cleansing routine.



- Turn the brush onto DAILY CLEANSE or SENSITIVE mode.
- Start with the forehead area, gliding over the skin in a slow, gentle, circular motion.

Tip: Avoid pressing hard or scrubbing your skin with the Brush. Hard pressure is not necessary for the cleansing process to be effective.

- After 20 seconds, the Zonal Timer will beep. Move on to the next section.
- 10 seconds on each cheek moving slowly from ear to lip.
- 20 seconds on the nose and chin and around the mouth.
- After 1 minute is up, the brush will automatically switch off.
- Rinse your skin with warm water.

Pat skin dry as usual and apply your regular moisturizer or other skincare products.

MAINTENANCE

- To maximize your battery life, charge your brush for 24 hours before first use.
- After use, wipe your Mannatech Brush dry and leave the brush head cap off until the bristles dry.
- Remove the brush head from the handles and rinse thoroughly to remove residue.
- Allow the brush head to completely dry before replacing the brush head protective cap.
- Keep the brush on its side or in its stand whenever possible to allow excess water to drip off.
- Avoid using abrasive chemicals and cleaners to clean any part of your Mannatech Brush.
- Charge the Brush at least once every 3 months to maintain the battery's ability to charge.
- Replace brush heads every 3 months or as needed to avoid bristle displacement and irritation to the skin.
- Avoid utilizing brush heads not made specifically for the Mannatech Brush.

TECHNICAL DEVICE SPECIFICATIONS

AC ADAPTER / CHARGE CRADLE

Input voltage: 100 - 240 V - 50/60 Hz

Output voltage: 12V DC - 500 mA

Full charge time: 15 hours

Quick charge time: 75 mins (single use)

Made in China

BRUSH TYPE M L01

Water proof rating: IP7

Power 6W

Average amplitude: 10,000 times/min

Made in China

ONE YEAR GUARANTEE

We want you to be happy with your new Mannatech Daily Cleansing & Exfoliation Brush. That's why we'll exchange it for up to one year from your purchase at no charge to you. This guarantee does not cover accidental damage, breakage or misuse of the product.

If you have any questions on the Mannatech Daily Cleansing & Exfoliation Brush, replacement brushes, accessories, guarantee or usage please contact 1-800-281-4469 in the U.S. or visit Mannatech.com for further instruction.



Visit us at Mannatech.com